

Varizoom

Jibstick JR



Communication connector (Green)- Connect this to the communication cable, and connect the other end of the communication cable to the green connector on the CinemaPro Head. This cable runs communication as well as power, so make sure that there is XLR power connected to the CinemaPro. ***NOTE – If you unplug this green communication cable, you must also unplug power or the controller may not sync to the head again.**

Pan direction and Tilt direction- Reverses the response direction for each axis

Joystick for pan and tilt operation- Move the joystick in the direction you wish the head to move. The response direction can be changed with the response direction switches.

Smoothing- Adjusts the amount of smoothing for both the pan and tilt axes. The higher the smoothing is set, the more dampened or 'ramped' the response will be. It adjusts the acceleration/deceleration curve.

Pan speed and Tilt Speed- Adjusts the maximum speed for the pan motor and tilt motor.

Deadband- Adjusts the amount the joystick must be moved before pan and tilt will respond.