

Nova M3 MFN300 Function Box Specifications

Ver 2.0.0 2014-2-20

1 Functions



Nova M3 MFN300-B is a multi-function box with a variety of auxiliary functions. It has the following characteristics:

- 1) RS232 serial or Gigabit Ethernet port communication;
- 2) Support Ethernet port connection between two receiving cards or at the end;
- 3) Has timer function, can replace timer and delayer;
- 4) Support temperature detection of power distribution box;
- 5) Support humidity detection of power distribution box;
- 6) Support audio output;
- 7) Support 2-way light sensor connection, achieve automatic brightness

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491



adjustment;

- 8) Support Temperature and humidity module connection;
- 9) Supports 8-way power switch control;



Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491



2 Dimensions and interface

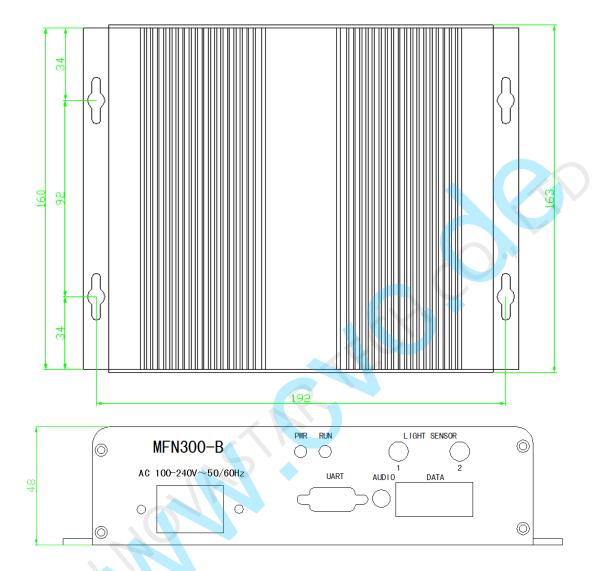


Fig. 1 MFN300-B dimensions

LIGHT SENSOR: Light sensor interface, Temperature and humidity module interface.

UART: RS232.

AUDIO: Audio output.

DATA: Ethernet port , connect to sending board or scan board.

CH1~CH8: 8 road power switch terminal.

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491



3 Connection


• Connect function box to computer directly by RS232 serial cable.



 Connect function box between sending card (or independent controller) and the first receiving card.



Connect function box to the last receiving card.

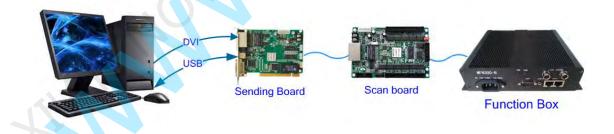


4 Software configuration

Run **NovaLCT-Mars** control software, click **Function Card** button to open Function Card Management page.

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491

5



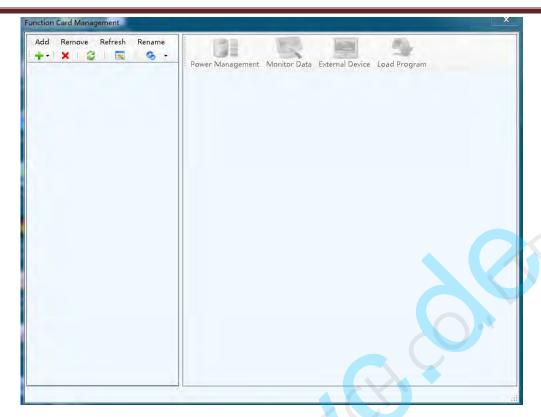

Use the menu in above Figure to configure function card, including add, remove, rename a function card, modify serial port, and replace serial port.

Add:

- > Serial port: Add a function card which is connected to the serial port.
- > Ethernet port: Add a function card which is connected to the Ethernet port.

Remove: Remove the selected node which could be a function card, Ethernet port, sending card or serial port.

Rename: Rename the selected function card.

Serial port operation:

Click • icon to select Modify Serial Port or Replace Serial Port.

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491



- Modify Serial Port: Set the selected serial port as one that no function card has been configured for it.
- Replace Serial Port: replace the selected serial port with the one which is configured but the configured device type is different from that actually connected, or is actually not connected.

Note: The icon is only available when the following requirements are satisfied: The selected node is a serial port; the device connected to it does not match the one configured to it, or the serial port is not connected.

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491



5 Working conditions

Voltage (V)	Rated voltage	5.00	Maximum	5.50	Minimum	3.30
Current (A)	Rated current	0.38				
Power	Rated power	2.00	Maximum	2.50		
consumption (W)	consumption					
Working			Maximum	75.00	Minimum	-20.00
temperature (°C)			Maximum	73.00	Willilliam	-20.00
Working relative			Maximum	0.99	Minimum	0.00
humidity			Maximum	0.99	Willilliam	0.00
Power						
management			Maximum	250.00	Minimum	0.00
control voltage (V)						
Power						
management			Maximum	3.00	Minimum	0.00
control current (A)						

Phone: NovaStar (Xian) +86 29 8450 7048 NovaStar (Shenzhen) +86 755 3359 2491