



### Programming PRO16

When programming a repaired or replaced PRO16 headset, the MAIN headset needs to be cleared before a Remote can be paired.

Follow the steps below to clear the MAIN headset. All headsets should be OFF before starting this process.

**Note: All headsets, Main & Remote, are automatically on Channel #1 when powered on.**

#### **Clearing MAIN Headset**

1a. With all system equipment off, install a battery in MAIN headset & press power button to turn ON. The LED will flash GREEN.

2a. Quickly press volume DOWN button (3) times, then press and **hold** volume UP button, until LED flashes RED/GREEN.

3a. Next press and hold the volume DOWN button for 3-5 seconds, until there is a *Rapid RED LED Flash*.

The MAIN is now cleared. The Main LED will continue to flash RED throughout the rest of the programming process.

#### **Programming PRO16 Remote headset(s) to Channel #1**

Now that the MAIN headset is prepared (ON and is flashing RED, Channel #1):

1b. Install a battery in REMOTE headset & press power button to turn ON. The LED will flash GREEN.

2b. Quickly press volume DOWN button on the REMOTE headset (3) times, then press and **hold** volume UP button, until LED flashes RED/GREEN.

Both the MAIN and this REMOTE will flash rapidly simultaneously.

3b. The REMOTE LED turns solid RED indicating the programming is successful.

4b. Install battery & Power ON the next REMOTE headset to be programmed. Repeat steps 2b through 3b for this headset.

*Repeat for all desired Remote headsets to be paired to Channel #1.*

*For those utilizing the second channel included with every PRO16 system, REMOTE headsets can also be programmed there.*

#### **Programming PRO16 Remote headset(s) to Channel #2**

1c. Press the GOLD Conference Button on the MAIN headset (located below microphone arm attachment on cup).

The MAIN LED will switch from flashing RED, to flashing GREEN. Now the MAIN headset is prepared (ON and is flashing GREEN, Channel #2).

2c. Install a battery in REMOTE headset & press power button to turn ON. The LED will flash GREEN.

3c. Quickly press volume DOWN button on the REMOTE headset (3) times, then press and **hold** volume UP button, until LED flashes RED/GREEN.

Both the MAIN and this REMOTE will flash rapidly simultaneously.

4c. The REMOTE LED turns solid RED indicating the programming is successful.

*Repeat for all desired Remote headsets to be paired to Channel #2.*

#### **Completing The Programming Connection**

When all Remote headsets have been activated into program mode (solid RED LED) power OFF every headset, including the MAIN.

1d. To power OFF headsets: Press the Power LED once. All headset LEDs will flash RED 3 times to confirm unit is powered down.

2d. Power ON all system headsets again, until each headset LED turns SOLID GREEN.

\*Any quantity of headsets can be supported per channel, as long as there are only 16 total headsets.

(Remote headset's are not required to be split evenly between CH#1 and CH#2).

\*Additional "Listen Only" Remote headsets can also be pre-programmed to a maxed out 16-user system.